


Data Link Connector: Connector Locations

Data Link Connector Access

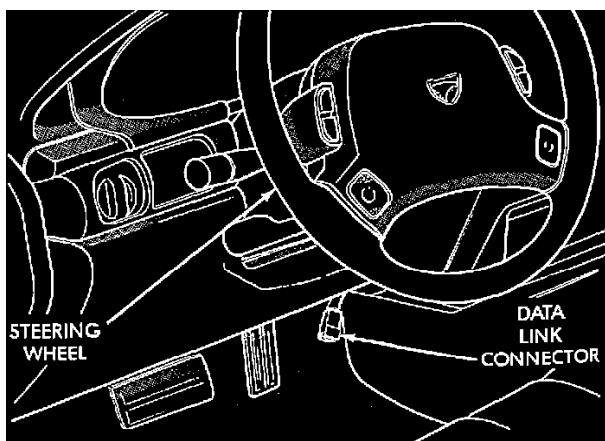

Data Link Connector

Connector is located on the drivers side near the center console. Reach down to lower edge of knee bolster to right of steering column. Inside the opening the data link connector can be swung down for access at lower edge of knee bolster.