


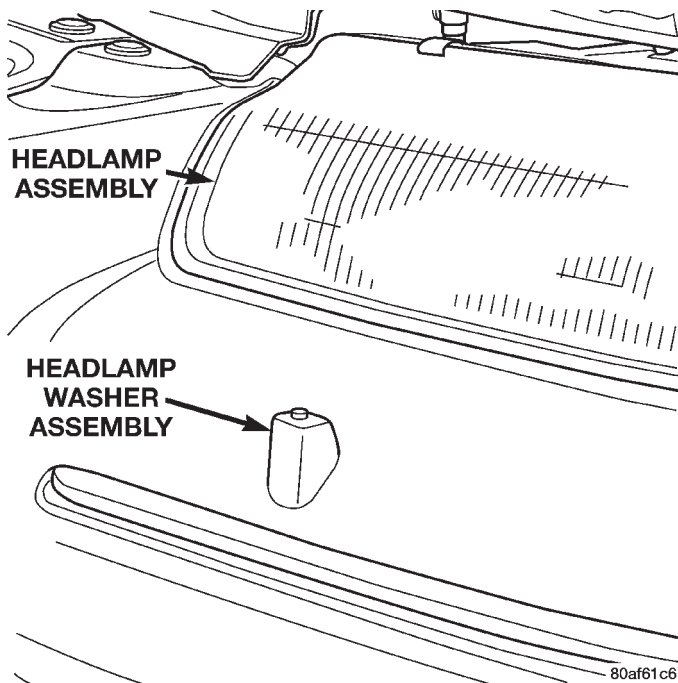

## REMOVAL AND INSTALLATION (Continued)

**HEADLAMP WASHER NOZZLE****Removal**

- (1) Remove the headlamp assembly. Refer to Group 8L, Lamps.
- (2) Disconnect the hose at the headlamp washer nozzle.
- (3) Remove the headlamp washer nozzle retaining clip and remove the nozzle from the front fascia.

*Fig. 2 HeadLamp Washer Nozzle***Installation**

- (1) For installation, reverse the above procedures.

**HEADLAMP WASHER PUMP****Removal**

- (1) Disconnect the washer fluid hose at the in-line connector at the top of the right shock tower.

- (2) Remove the right headlamp assembly. Refer to Group 8L, Lamps.

- (3) Partially remove the inner fender well as needed to gain access to the reservoir.

- (4) Disconnect the windshield washer pump and headlamp washer pump electrical connectors.


- (5) Remove the headlamp washer relay from bracket.

- (6) Disconnect the headlamp washer pump hose.

- (7) Remove the reservoir mounting bolts.

- (8) Slide the reservoir rearward and remove from the vehicle.

- (9) Remove the headlamp washer pump from the reservoir.

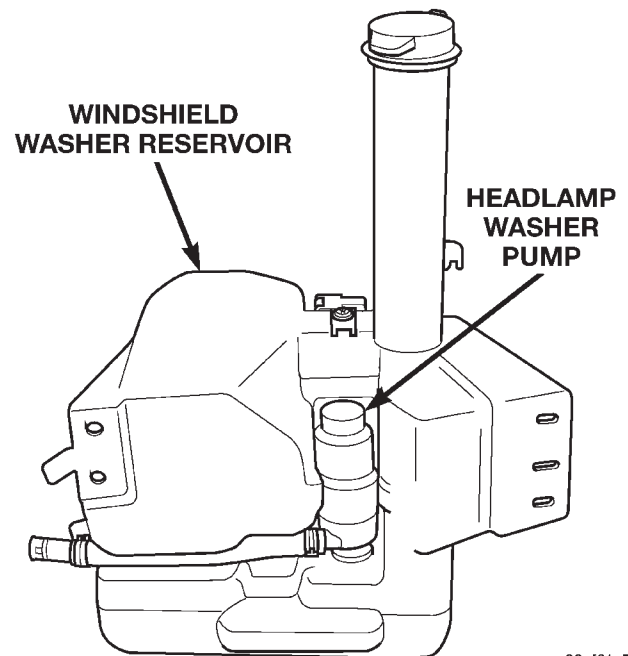*Fig. 3 Headlamp Washer Pump***Installation**

- (1) For installation, reverse the above procedures.