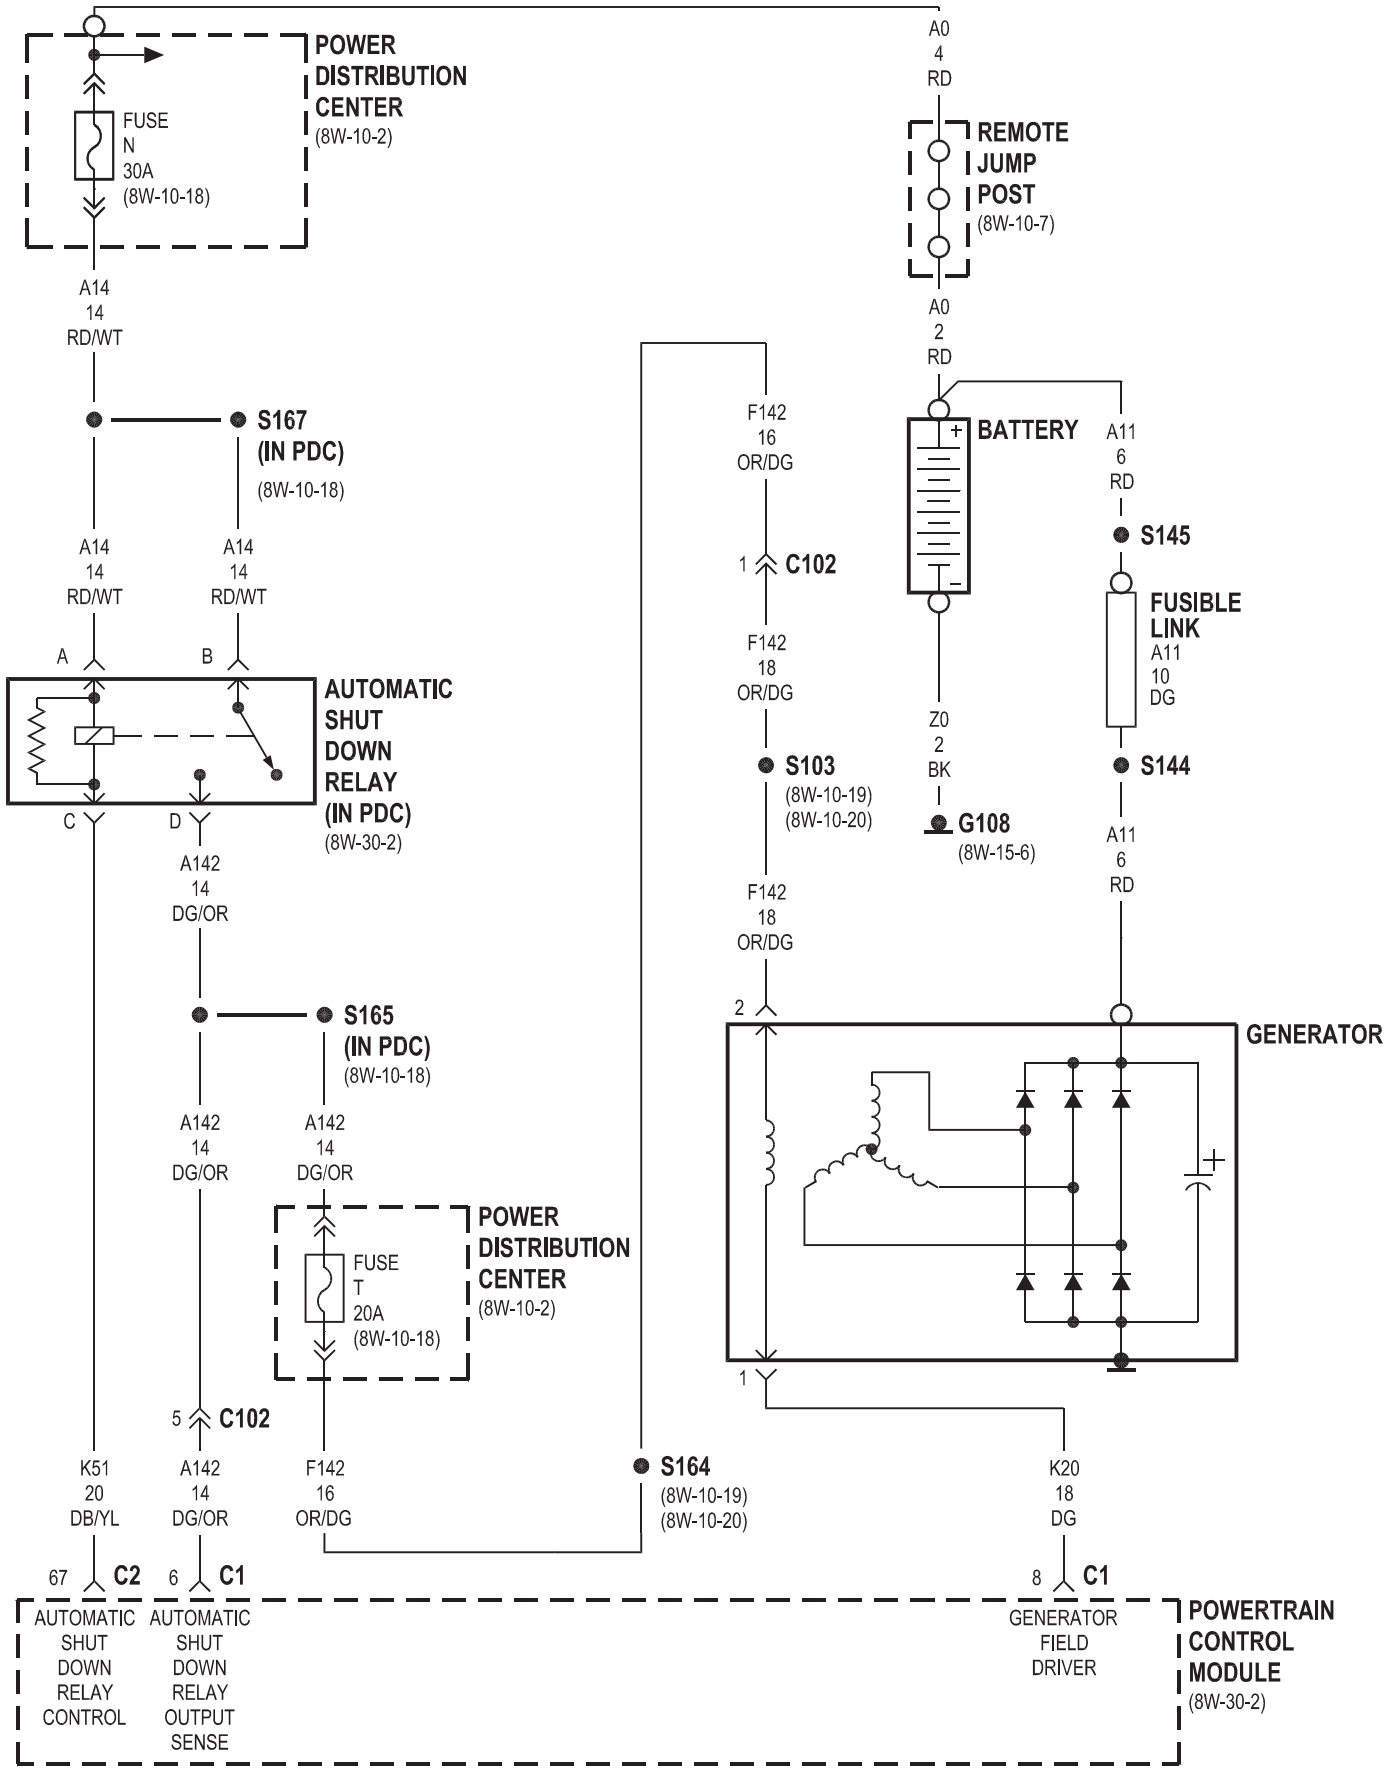
POWER DISTRIBUTION CENTER
(8W-10-2)
FUSE
N
30A
(8W-10-18)
A14
14
RD/WT
S167
(IN PDC)
(8W-10-18)
A14
14
RD/WT
A14
14
RD/WT
A
B
AUTOMATIC SHUT DOWN RELAY (IN PDC)
(8W-30-2)
C
D
A142
14
DG/OR
S165
(IN PDC)
(8W-10-18)
A142
14
DG/OR
A142
14
DG/OR
POWER DISTRIBUTION CENTER
(8W-10-2)
FUSE
T
20A
(8W-10-18)
5
C102
K51
20
DB/YL
A142
14
DG/OR
F142
16
OR/DG
67
C2
6
C1
AUTOMATIC SHUT DOWN RELAY CONTROL
AUTOMATIC SHUT DOWN RELAY OUTPUT SENSE
A0
4
RD
REMOTE JUMP POST
(8W-10-7)
A0
2
RD
BATTERY
F142
16
OR/DG
1
C102
F142
18
OR/DG
S103
(8W-10-19)
(8W-10-20)
F142
18
OR/DG
S164
(8W-10-19)
(8W-10-20)
Z0
2
BK
G108
(8W-15-6)
A11
6
RD
S145
FUSIBLE LINK
A11
10
DG
S144
A11
6
RD
2
GENERATOR
1
K20
18
DG
8
C1
GENERATOR FIELD DRIVER
POWERTRAIN CONTROL MODULE
(8W-30-2)